

NOTE

- Carefully read the user manual before using, and keep it well for future reference.
- Carefully check the device parts list before using. For any doubt, contact Launch distributor immediately.
- Due to the product upgrade, tiny difference between the user manual and the device will not be further noticed. Take the device as standard.

Copyright Information

Copyright reserved! Without written agreement from Launch Tech Co., Ltd (Hereinafter refer to "Launch"), any company or person is not allowed to copy and duplicate this user manual in any format (electronic, mechanical, video, record or other formats). The user manual is designed only for Launch products. Any consequence caused by using the user manual to guide other device operation is not under the responsibility of Launch.

Launch and its branches are not responsible for the fees and expense of the device damage and loss due to private accident or from third party, misuse and abuse of the device, unauthorized change and repair, or any operation and maintenance not following Launch standard.

Launch is not responsible for device damage or problem due to the usage of any optional parts or consumables instead of Launch original products or Launch recognized products.

Declaration: Other product names mentioned in the user manual are aimed to describe the device usage. The registered trademarks still belong to the original company.

The device is for professional technicians or maintenance and repair personnel.

Registered Trademark

Launch has registered its trademark in China and several other countries, logo is **LAUNCH**. Other Launch trademarks, service marks, dot names, icons, company names mentioned in the user manual all belong to Launch and its subsidiaries. In those countries where Launch trademark, service mark, dot name, icon, company name not registered yet, Launch disclaim the right for its unregistered trademark, service mark, dot name, icon, and company name. Trademarks of the other products and company names mentioned in the user manual still belong to original registered company. Without written agreement from the owner, no person is allowed to use the trademark, service mark, dot name, icon and company name of Launch or of other mentioned companies. You can visit <http://www.cnlaunch.com> or write to Customer Service Center of LAUNCH TECH CO., LTD at Launch Industrial Park, North of Wuhe Avenue, Banxuegang, Longgang District, Shenzhen, P.R.China, to get contact with Launch for the written agreement on the usage of the User Manual.

Table of Contents

Chapter 1 Product Summary.....	1
1.1 Product Profile	1
1.2 Product Function.....	1
1.3 Technical Parameters	2
1.4 Working Environment Requirement	3
Chapter 2 Tester Structure.....	4
Chapter 3 Operation.....	5
3.1 Pre-Test.....	5
3.1.1 Connect Tester.....	5
3.1.2 Key Description.....	5
3.2 Tester Startup.....	5
3.3 Battery Test.....	6
3.3.1 Select Battery Type.....	7
3.3.2 Battery System Standard and Rating	7
3.4 Cranking Test.....	8
3.5 Charging System and Rectifier Diode Test.....	9
3.5.1 Charging Test Result	9
3.6 Additional Functions.....	11
3.6 .1 View test result	11
3.6 .2 Print Test Result.....	11
3.6 .3 Select Language.....	11
Chapter 4 Daily Maintenance.....	12
4.1 Eliminate Common Fault	12
4.1.1 Screen Not Light.....	12
Chapter 5 Warranty Clause.....	13

Chapter 1 Product Summary

1.1 Product Profile

BST-560 Battery Tester adopts currently the world's most advanced conductance testing technology to easily, quickly and accurately measure the actual cold cranking amps capability of the vehicle starting battery, healthy state of the battery itself, and common fault of the vehicle starting system and charging system, which can help maintenance personnel to find the problem quickly and accurately, thus to achieve quick vehicle repair.

1. Test all automotive cranking lead acid battery, including ordinary lead acid battery, AGM flat plate battery, AGM spiral battery, and Gel battery, etc.
2. Directly detect bad cell battery.
3. Polarity reverse connection protection, reverse connection will not damage the tester or affect the vehicle and battery.
4. Directly test the battery with loss of electricity, no need to full charge before testing.
5. Testing standards include currently the world's majority of battery standards, CCA, BCI, CA, MCA, JIS, DIN, IEC, EN, SAE, GB.
6. Support multi-languages, customer can select different language package, which includes:

European version A: English, Russian, French, Italian, German, Polish

European Version B: Dutch, Sweden, Finnish, Turkish, Danish, Norwegian

American version :English, Spanish, Portuguese, French

Asian version A: English, Chinese Simple, Chinese Traditional

Asian version B: English, Japanese, Korean

1.2 Product Function

Main functions of BST-560 battery tester include: battery test, cranking test, charging test and other additional functions.

Battery test is mainly targeted to analyze the battery healthy status to calculate the actual cold cranking capability of the battery and the aging extent, which provide reliable

analysis evidence for the test and maintenance of the battery. It notifies the user to replace battery in advance when the battery getting aged.

Cranking test is mainly to test and analyze the starting motor. Through testing the actual required cranking current and cranking voltage of the starting motor, it can find out whether the starting motor works fine. There are several reasons why the starting motor is abnormal: lubricating system fault causing the starting loaded torque increasing or rotor friction of the starting motor causing the increasing friction of the starting motor itself.

Charging test is to check and analyze the charging system, including generator, rectifier, rectifier diode, etc., thus to find out whether the output voltage of the generator is normal, the rectifier diode works fine and the charging current is normal. Suppose one of the above mentioned parts is not in normal situation, it will lead to over charge or incomplete charge of the battery, thus the battery will be quickly damaged and also greatly shorten the using life of other loaded electrical appliance.

Additional functions include: Set language, print test result

1.3 Technical Parameters

1、 Cold Cranking Amps Measure Range:

Measure Standard	Measure Range
CCA	100-2000
BCI	100-2000
CA	100-2000
MCA	100-2000
JIS	26A17--245H52
DIN	100-1400
IEC	100-1400
EN	100-2000
SAE	100-2000
GB	30-220AH

2、 Voltage Measure Range: 7-16VDC

1.4 Working Environment Requirement

Working Environment Temp.: -20°C-50°C

It is applicable for automotive manufacturers, automotive maintenance and repair workshops, automotive battery factories, automotive battery distributors, and educational organizations, etc.

Chapter 2 Tester Structure

BST-560 mainly consists of battery tester main unit and USB Cable.

BST-560 Battery Tester main unit cover is made of ABS acid-resistant plastic.



USB Cable (With attached picture)



Chapter 3 Operation

3.1 Pre-Test

3.1.1 Connect Tester

Connect the red test clamp with battery anode and the black one with cathode, the tester will power on automatically. Voltage battery below 7.0VDC can't be tested properly, then press OK key to continue.

According to the tester, you can press UP/DOWN key to choose:

- ① battery test
- ② starting system test
- ③ charging system test
- ④ battery test result
- ⑤ print test result
- ⑥ select language

3.1.2 Key Description

-  Up and Down keys

Select upwards or downwards via UP and DOWN keys.

-  Return key

Return to previous menu via RETURN key.

-  Ok key

Confirm the selection via OK key




Key Photo

3.2 Tester Startup

Tester automatically starts up after the clamps are correctly connected, and displays the Launch startup interface refer to figure 1.



Figure 1.

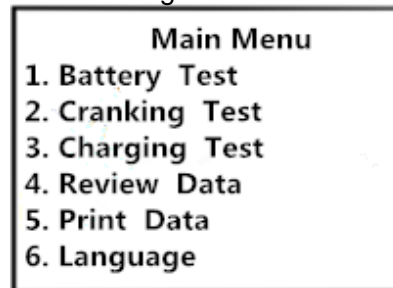

Main menu

3.3 Battery Test

After entering battery test program, tester displays the tester model and version approx. 2 seconds, Interface with tester model and version

Tester will display the following contents in a sequence, select accordingly.

Select the battery test and press OK key to continue:

Input testing standard: the standard which you can see the front of the battery ,such as CCA、 BCI 、 DIN. If you can't find any info about the standard, you can choose GB standard. Choose GB standards would lead little tolerance.

Input rated capacity: you can see the starting current standards in front of the battery .Such as BCI/300A.

Then press OK key to start testing.


NOTE:

For power loss battery (such as a vehicle for a long time on hold, the battery is not charged in time; forget to close the lights, the doors resulting in serious loss

of battery electric vehicle and can not be started, etc.), in the actual testing process may also be prompted to "Please replace the battery," for such batteries, please consult the battery manufacturers, and then tested.

3.3.1 Select Battery Type

After the battery test selected, tester will prompt to select battery type, i.e. Regular Flooded, AGM Flat Plate or AGM Spiral, and Gel battery. Press UP/DOWN key to select battery type, and press OK key to confirm.

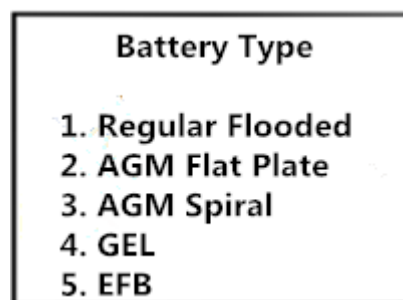

3.3.2 Battery System Standard and Rating

BST-560 battery tester will test each battery according to the selected system and rating.

Use UP/DOWN key to select according to the **actual system standard and rating** marked on the battery. Use UP/DOWN key to select according to the actual system standard and rating marked on the battery. See in the below picture, the arrow indicated location.



CCA: Cold Cranking Amps, specified by SAE&BCI, most frequently used value for starting battery at 0°F (-18°C).

BCI: Battery Council International standard

CA: Cranking Amps standard, effective starting current value at 0°C

MCA: Marine Cranking Amps standard, effective starting current value at 0°C.

JIS: Japan Industrial Standard, displayed on the battery as combination of the numbers and letters, e.g. 55D23,80D26.

DIN: German Auto Industry Committee Standard

IEC: Internal Electro technical Commission Standard


EN: European Automobile Industry Association Standard

GB: China National Standard

Input correct test standard and rating, press OK key, tester starts to test, and dynamic interface "TESTING" prompted. See below:



It takes around 3 seconds to display the battery test result.

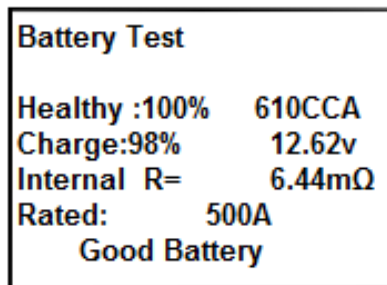

3.4 Cranking Test

Tester prompts as following:




Starting the engine as prompted, tester will automatically complete the cranking test and display the result.




Normally, cranking voltage value lower than 9.6V is regarded as abnormal, higher than 9.6V is OK.

Test result of the tester includes actual cranking voltage and actual cranking time.

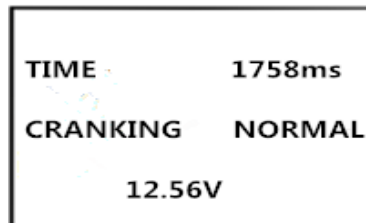

When cranking test is abnormal, battery test result will also be displayed at the same time.

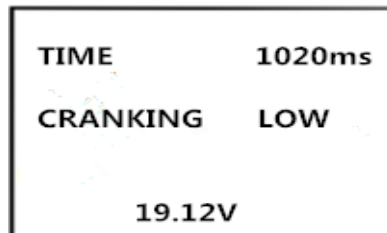

This is for the convenience of the maintenance personnel to quickly know the whole state of the starting system according to the data.

3.5 Charging System and Rectifier Diode Test


When enter the charging test, tester will prompt "Loaded testing"



Press OK key again to start the charging test.

NOTE: Do not shut down the engine during the test. All electrical appliance and device are in OFF state. Turn on/off any electrical appliance in the vehicle during the test will affect the accuracy of the test result.


Operate accordingly to increase the engine rotating speed to 2500turns, and keep for 5 seconds.

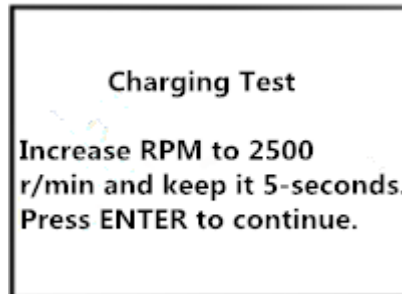

Tester starts the charging volt test after increase rev detected.



After the test finished, tester displays the effective charging volts, ripple test result and charging test result.

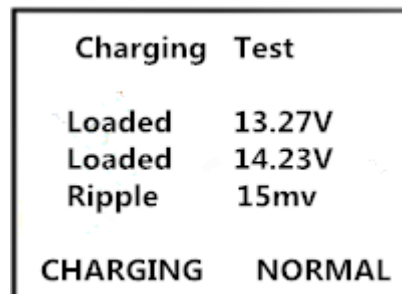

NOTE: If no increase rev detected, it shall be the fault of generator regulator or connection with battery failed. Tester will try 3 times to further detect, if still failed, it will skip the increase rev detect and the test result displays "No Volt Output".

Check the connection between generator and battery, then retest.

3.5.1 Charging Test Result

1) Charging Volt: Normal

Charging system shows the generator output normal, no problem detected.

2) Charging Volt: Low

Charging volt of the charging system is low.

Check drive belt of the generator whether slip or running off. Check the

connection between generator and battery is normal or not.

If both of the drive belt and the connection are in good condition, follow the manufacturer's suggestion to eliminate generator fault.

3) Charging Volt: High

Generator output volt is high.

Since most of the vehicle generators are using internal regulator, the generator assembly has to be replaced.(Some old style cars are using external regulator, then directly replace the regulator.)

The normal high volt of the voltage regulator is maximum $14.7\pm 0.5V$.If charging volt is too high, it will overcharge the battery. Therefore the battery life will be shortened and troubles will be caused.

4) No Volt Output:

No generator volt output is detected. Check the generator connection cable and the belt whether they are normal.

5) Diode Test:

Through the test of charging current ripple, tester will find out whether the diode is normal or not. When ripple volt is too high, it proves at least one diode is damaged. Check and replace the diode.

Till now, all tests have been done.

3.6 Additional Functions

3.6.1 View test result

After entering the forth function, then press OK key you can view the final test result.

3.6.2 Print Test Result

About Printing function, connect the tester to computer with USB Cable,then export the testing result.(Before this ,need contact our company for the software first,download a exporting software to your computer)

3.6.3 Select Language

This option is to let user select language.

European version A: English, Russian, French, Italian, German, Polish

European Version B: Dutch, Sweden, Finnish, Turkish, Danish, Norwegian

American version :English, Spanish, Portuguese, French

Asian version A: English, Chinese Simple, Chinese Traditional

Asian version B: English, Japanese, Korean

Chapter 4 Daily Maintenance

4.1 Eliminate Common Fault

4.1.1 Screen Not Light

- Check connection with the battery whether it's well or reverse connected.
- Check the test cable whether break off or drop down.

Chapter 5 Warranty Clause

The warranty clause is only applicable to users and distributors who purchased Launch products via the regular process.

Within 3 years since the delivery, Launch guarantee the products damaged due to the material or craft defects. Any damage to the device or part due to abuse, unauthorized change, usage other than designed to, operation not following the user manual, etc. is out of the warranty. Compensation for the auto instrument damage due to the device defect is limited to repair or replacement, Launch is not responsible for any indirect or accidental loss. Launch will clarify the device damage according to the specified test method. Any distributor, employee and business representative of Launch are not entitled to do any confirmation, presentation or promise related to Launch products.

Statement of Disclaimer

The above warranty clause can substitute for any other form of warranty clauses.

Purchase Order

Replaceable parts and optional parts are available from Launch authorized suppliers.

Purchase order should include:

Order quantity

Part Number

Part Name

Customer Service Center

Any question during the operation, please call to 86-755-84528888 or 400-0666666.

For maintenance and repair, please send back to Launch with Warranty Card, Product Qualified Card, Purchase Invoice and problem description. Launch will maintain and repair the device for free when it is within the warranty. Otherwise, Launch will charge the maintenance and repair and the shipping.

Launch address:

Shenzhen Launch Tech Co., Ltd,

Launch Industrial Park, North of Wuhe Avenue. Banxuegang, Longgang District, Shenzhen, P.R.China

Receiver: Customer Service Center Postcode: 518129

Launch Website: <http://www.cnlaunch.com>